



HD-HSIU2



DriveStation HD-HSIU2 Series

## QUICK SETUP GUIDE



## DriveStation HD-HSIU2 Series

### Package Contents

Thank you for purchasing a Buffalo DriveStation.

Package contents include:

- DriveStation
- USB 2.0 Cable
- FireWire (IEEE1394) Cable
- Quick Setup Guide
- Setup CD-ROM
- Warranty Statement

### Introduction

The Buffalo TurboUSB utility can greatly improve the data transfer rates to and from your Buffalo USB hard drive. The utility cannot be used with other USB devices.


### Installation

1

Insert your DriveNavigator CD in your computer's CD drive.

To setup your DriveStation, click on the *DriveStation Setup Wizard* and follow the instructions. (Fig: 1)

To install TurboUSB on your computer, Click on *TurboUSB Utility* button. Follow the wizard to complete the installation.

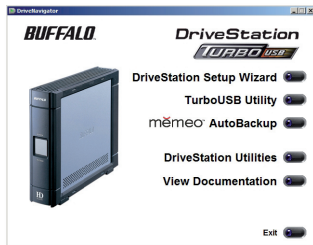

## Using TurboUSB

2

To use TurboUSB, you must first *enable* it. From the *Start* menu, choose *Programs > BUFFALO > TurboUSB > TurboUSB for HD-HSU2*. (Fig: 2)

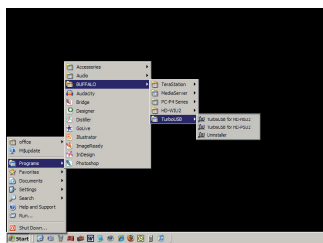


Fig: 2

Click *Enable* and follow the instructions. (Fig: 3)

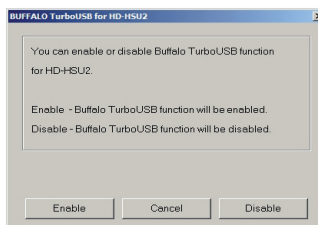



Fig: 3

Once the wizard has completed you must disconnect the DriveStation by clicking on the 'Safely Remove Hardware' icon  in the systray (located in the taskbar) (Fig: 5). Once indicated, remove and reattach the USB cable from your PC to finalise activation of TurboUSB.

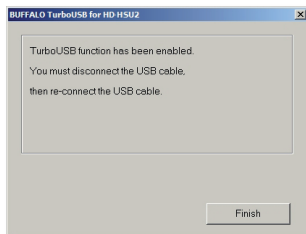


Fig: 4

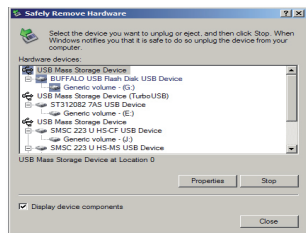


Fig: 5

You may also turn TurboUSB off from the same window by clicking *Disable* and following the steps (Fig: 3). You must then unplug and reconnect the USB hard drive to finalise the process. Use the 'Safely Remove Hardware' wizard to release the drive before unplugging it.

## Is TurboUSB enabled?

3

To check whether TurboUSB is enabled, right-click on *My Computer* and choose *Properties > Hardware > Device Manager > Universal Serial Bus controllers*. If TurboUSB is enabled, your USB storage device will have “(TurboUSB)” added to its name. (Fig: 6)

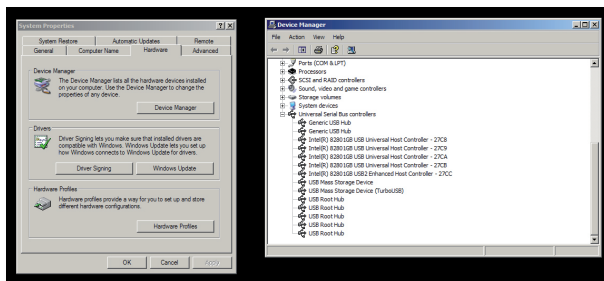


Fig: 6

## Uninstalling

4

To remove the Buffalo TurboUSB utility from your computer, click *Start > Programs > BUFFALO > TurboUSB > Uninstaller*. This will launch an uninstall screen. Click on *Start* to run the uninstallation. (Fig: 7)

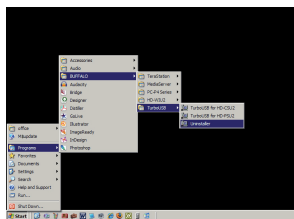


Fig: 7

### ***TurboUSB For Mac***

The Buffalo TurboUSB utility can greatly improve the data transfer rates to and from your Buffalo USB hard drive. Other USB devices are not affected by TurboUSB software.

### ***Installation and Using TurboUSB***

1

1. Insert the Buffalo Technology CD in your computer CD drive
  2. Double-click on *TurboUSB.dmg*.
  3. Navigate to the "**TurboUSB**" directory on the Desktop and double-click on TurboUSBHDDInstall.
  4. After the Buffalo TurboUSB software is installed, click Restart.\*
- \* You must restart your Mac.

### ***Is TurboUSB enabled?***

2

If TurboUSB is enabled, the icon of your USB storage device will look as indicated.



### ***Technical Specifications***

<b>USB Standards:</b>	USB Specification Rev. 2.0
<b>Seek Time:</b>	Max. 11 milliseconds
<b>Transmission Speed:</b>	Max. 480 Mbps
<b>Power Consumption:</b>	Max. 25W, Average 17W
<b>Power Supply:</b>	AC100-240V 50/60Hz
<b>Dimensions:</b>	1.77" (W) x 7.86" (H) x 6.41" (D) / 45(W) x 200(H) x 163(D) mm
<b>Weight:</b>	2.8 lb. / 1.5 kg
<b>Operating Environment:</b>	5 - 35 degree C / 41 - 95 degree F 20-80% humidity (non-condensing)

**FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CE Mark Warning**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

**Environmental Information**

- The equipment that you have purchased has required the extraction and use of natural resources for its production.
- The equipment may contain hazardous substances that could impact health and the environment.
- In order to avoid the dissemination of those substances in our environment and to diminish the pressure on the natural resources, we encourage you to use the appropriate take-back systems.
- The take-back systems will reuse or recycle most of the materials of your end life equipment in a sound way.
- The crossed-out wheeled bin symbol invites you to use those systems.



- If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

**Technical Support****USA/Canada:**

Helpdesk Hours *24 hours a day, 7 days a week*  
 Phone *866-752-6210 toll-free*  
 Email *info@buffalotech.com*

**Europe:**

Helpdesk Hours *Monday-Thursday 9:00 AM - 6:00 PM*  
*Friday 9:00 AM - 4:30 PM*  
 Phone *+353 61 70 80 50*  
 Phone (UK only) *08712 50 12 60*  
 Email *helpdesk@buffalo-technology.ie*